



The World's Most Trusted Vibration Monitor.




Micromate® Quick Reference Guide

www.instanTel.com

1 Turn the Micromate On

The Micromate is shipped with the internal battery electronically disconnected. Press and hold the Power Button for five seconds to turn the unit on.

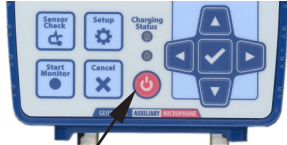


Power Button

2 Micromate Connectors

Connect the Geophone and Microphone to the bottom of the Micromate unit. If using other devices, such as remote alarms or wire triggers, connect these to the Aux connector. Connectors and cables are color coded.



 The Charger, Computer and supported USB devices are connected to the top of the Micromate unit. These connectors are from left to right: 5V-DC (mini USB), PC Port (USB A) and (USB) port. NOTE: Use the 5V-DC port to connect to external power and charge the battery. Only the 5V-DC port allows for battery charging.




3 Accessing the Micromate Menus

The Micromate display is a touch sensitive resistive display. This provides the ability to use your finger, with or without gloves, to access menus. In addition to the touch screen, the Micromate also supports six function keys and four arrow keys for navigating through menus. The keys can be used in combination with the touch screen providing additional flexibility.

4 Micromate LCD



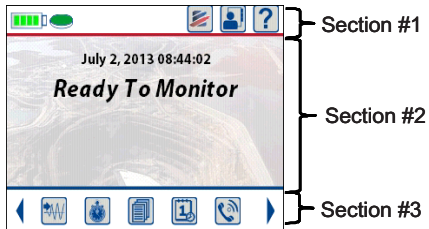











The screen functionality has been divided into three sections (see the picture below). The icons in section #1 are context sensitive and will change depending on the currently open screen. Section #2, the main display section, will display the current state of the unit as well as user changeable data. Selecting a menu in this section will either allow for toggling through the options or will open a new screen for editing. When editing numbers, use the Up and Down arrow keys or use a finger to swipe up and down in the highlighted box. To select a different item, use the Left and Right arrow keys or simply touch the desired entry. Section #3 provides short cuts to the most commonly used functions or menus within the Micromate program.



5 Section #1 - Context Sensitive Icons

- | | |
|-----------------------|--------------------------------------------------------------------------------------------------------|
| Battery Charge Level | Delete |
| Charger Connected | Context Sensitive Help |
| Available Memory | Return to Home screen |
| 75% Free Memory | Cancel |
| Owner Information | Add Operator Name |
| InstanTel Information | Compass Keys |
| Save Information | Data exists in the direction of the highlighted key. Use a finger swipe or use the arrow keys to view. |
| Print Events | |






6 Section #3 - Short Cut Icons

	Edit Trigger Level		Edit Password
	Edit Record Time		Unit Setups
	Event List		Perform Sensor Check
	Edit Date and Time		Start Monitoring
	Edit Auto Call Home		Enter/Accept
	Edit User Preferences		Owner Information
	Maintenance Menu		InstanTel Information

7 Micromate Key Pad



Function Keys





	Turn display On/Off. Hold to connect and disconnect the battery.
	Unit Setups
	Perform Sensor Check
	Start Monitoring
	Cancel

Navigation Keys

Use the arrows keys to move through menu items. The Checkmark is used to Select, Enter or Accept the current information.

Indicator LEDs

The Charging Status LED will be:

	Off - No external power source connected
	Green - Battery fully charged
	Yellow - Battery charging
	Red - Problem with charge circuit

"Heart Beat" LED will flash slowly when the battery is connected and the LCD is off. It will flash faster if the unit is monitoring and very fast if the unit is recording an event.

8 Configure the Recording Setups

The factory default settings are listed below. Change these as required to match your monitoring needs.

Preferences

Sensor Check	After the event
Measurement Units	Metric
Pressure Units	dB
Auto Call Home	Disabled
Display & Sound	Screen Saver 2 min, Beep on Key Press, Beep when Triggered
Password	Disabled

Recording Setup

Active Sensors	Geophone/Microphone
Microphone Type	Linear
USB Sensors	None Connected
Record Mode	Waveform
Record Time	Fixed 3 seconds
Pre Trigger Length	0.25 seconds
Sample Rate	1024 for ISEE (or 2048 for DIN)
Trigger Source	Geophone
Trigger Level	12.7 mm/s
Notes	All text fields blank
Job Number	Off
Monitor Scheduler	Off
Scaled Distance	Disabled
GPS Location	Edit (00 0.000 N 00 0.000W)
Auxiliary I/O	Off


9 Recording Events

After the unit has been configured press the Start Monitor key to record an event.

10 View Events on the Micromate

Select the Event List icon or press the Down arrow key to view the list of recorded events. Select the desired event from the Event List and either double tap on the entry or press the right arrow key. Navigate through the event results using the touch screen or keypad.


11 Save Events

With the Event List displayed on the Micromate screen, connect a USB memory stick to the  (USB) port. The Save icon will appear at the top of the screen. Select the event(s) to save and press the Save icon.

12 Delete Events

With the Event List displayed on the Micromate screen, select the event(s) to be deleted and press the Delete icon.

13 Print Events (optional printer required)

To print the events connect the InstanTel supported printer to the  (USB) port. The Printer icon will appear. Select the event(s) to be printed and press the Print icon.